

WI-PCMS310GF(V2) | WI-PCMS328GF(V2)

1. Packing Content




Switch x 1




Quick Installation Guide x 1



Serial Line x 1

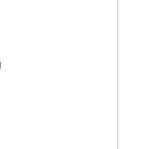

Power Cord x 1

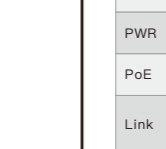

Mounting Accessories (hook x 2, mats x 4, screw x 8)


2. Appearance Overview

WI-PCMS310GF

• Front panel



• Back panel

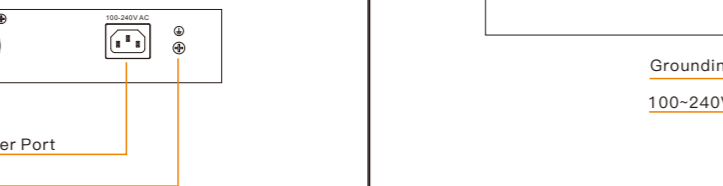


• LED indicator and button


LED indicators & button	Description
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PWR	On: The device power on is normal Off: The device is power off or failed
PoE	On: Equipment connected, normal power supply Off: Port not for terminal equipment power supply
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

WI-PCMS328GF

• Front panel

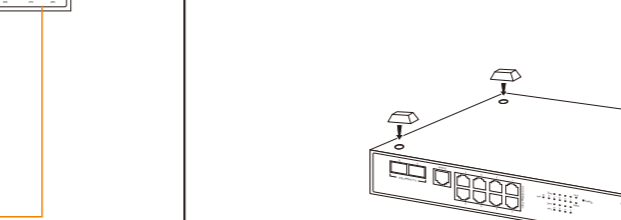

• Back panel

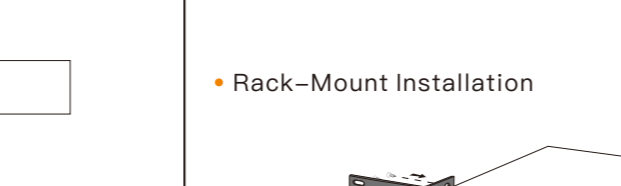


• LED indicator and button



LED indicators & button	Description
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PWR	On: The device power on is normal Off: The device is power off or failed
PoE	On: Equipment connected, normal power supply Off: Port not for terminal equipment power supply
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

3. Installation

• Desktop Installation



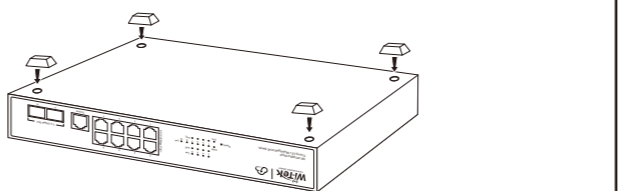


• Rack-Mount Installation

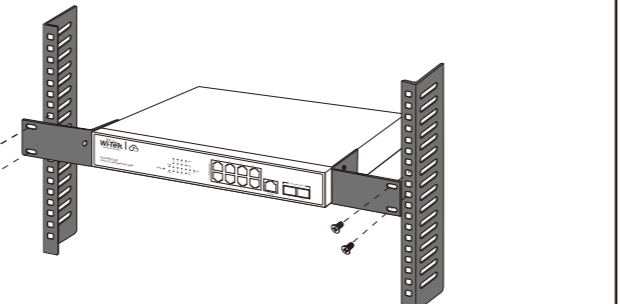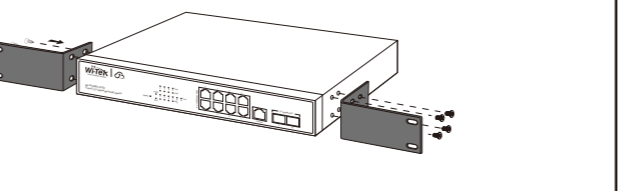

4. Configuration

   • Desktop Installation



• Configuration

First, the device is powered on, the Internet is connected to the WAN port of the Gateway, the other one LAN port of the Gateway is connected to the PoE Switch, then the PC is connected to the Switch. Ensure that the PC and the Gateway are in the same subnet.

To log in, follow these steps:
1. Launch your web browser, you type the appropriate IP address in the address bar
2. The login screen will appear. The default username and password are both admin

Note:
Step 2 is your computer recognizes the COM number of the Console line
Step 3 is the baud rate of the exchange (the baud rate of the switch is 9600)

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you with a new product of the same model.
- If the product defects within the three-year warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

